

DIAGNOSTIC TROUBLE CODES 1994 TO 1996:

- DTC #11: Malfunction Indicator Lamp Circuit.
- DTC #13: Bank #1 Heated Oxygen Sensor #1 Circuit:
- DTC #14: Engine Coolant Temperature Sensor Circuit Voltage Low.
- DTC #15: Engine Coolant Temperature Sensor Circuit Voltage High.
- DTC #16: Distributor Ignition System Low Pulse.
- DTC #18: Injector Circuit.
- DTC #21: Throttle Position Sensor Circuit Voltage High.
- DTC #22: Throttle Position Sensor Circuit Voltage Low.
- DTC #23: Intake Temperature Sensor Circuit Voltage High.
- DTC #24: Vehicle Speed Sensor Circuit.
- DTC #25: Intake Air Temperature Sensor Circuit Voltage Low.
- DTC #26: Evaporative Emission Canister Purge Solenoid Valve Circuit.
- DTC #27: EGR Vacuum Control Signal Solenoid Valve Circuit.
- DTC #28: Transmission Range Pressure Switch Assembly Fault.
- DTC #29: Secondary Air Injection Pump Circuit.
- DTC #32: Exhaust Gas Recalculation.
- DTC #33: Manifold Absolute Pressure Sensor Circuit High.
- DTC #34: Manifold Absolute Pressure Sensor Circuit Low.
- DTC #36: Distributor Ignition System High Pulse.
- DTC #37: Brake Switch Stuck On.
- DTC #38: Brake Switch Stuck Off.
- DTC #41: Ignition Control Circuit Open.
- DTC #42: Ignition Control Circuit Shorted.
- DTC #43: Knock Sensor Circuit.
- DTC #44: Bank 1 LF Heated Oxygen Sensor #1 Circuit Lean.
- DTC #45: Bank 1 LF Heated Oxygen Sensor #1 Circuit Rich.
- DTC #47: Knock Sensor Circuit Or Module Missing.
- DTC #48: Mass Air Flow Sensor Circuit.
- DTC #50: System Voltage Low.
- DTC #51: EEPROM Programming Error.
- DTC #52: Engine Oil Temperature Sensor Circuit Voltage Low.
- DTC #53: System Voltage Low.
- DTC #55: Fuel Lean Monitor.
- DTC #58: Transmission Fluid Temperature Sensor Circuit Low.
- DTC #59: Transmission Fluid Temperature Sensor Circuit High.
- DTC #62: Engine Oil Temperature Sensor Circuit Voltage Low.
- DTC #63: Bank 2 RF Heated Oxygen Sensor #1 Circuit Open.
- DTC #64: Bank 2 RF Heated Oxygen Sensor #1 Circuit Lean.
- DTC #65: Bank 2 RF Heated Oxygen Sensor #1 Circuit Rich.
- DTC #66: A/C Refrigerant Pressure Sensor Circuit Open.
- DTC #67: A/C Pressure Sensor Circuit Sensor or A/C Clutch.
- DTC #68: A/C Relay Circuit.
- DTC #69: A /C Clutch Circuit.
- DTC #70: A/C Clutch Relay Driver Circuit.

DTC #72: Vehicle Speed Sensor Loss.
DTC #73: Pressure Control Solenoid Circuit Current Error.
DTC #74: Traction Control System Circuit Low.
DTC #75: Transmission System Voltage Low
DTC #77: Primary Cooling Fan Relay Control Circuit.
DTC #78: Secondary Cooling Fan Relay Control Circuit.
DTC #79: Transmission Fluid Overtemp.
DTC #80: Transmission Component Slipping.
DTC #81: Transmission 2-3 Shift Solenoid Circuit.
DTC #82: Transmission 1-2 Shift Solenoid Circuit.
DTC #83: Torque Converter Solenoid Voltage High.
DTC #84: 3-2 Control Solenoid Circuit.(Auto Only).
DTC #84: 2nd And 3rd Gear Blockout Relay Control Circuit.
DTC #85: Transmission TCC Stock On.
DTC #90: Transmission TCC Solenoid Circuit.
DTC #91: One To Four Upshift Lamp(Manual Only).
DTC #97: VSS Output Circuit.
DTC #98: Tachometer Output Signal Voltage Wrong.