

## C6 Corvette DIC Codes

B0159 Outside Air Temp Sensor Circ B2910 Steering Column Lock Password Incorrect  
B0164 Pass Compartment Temp Sensor Circ B2981 Right Front Door Handle Switch Circ  
B0174 Output Air Temp Sensor 1 B3089 Content Theft System Intrusion Sensor Signal  
Circ  
B0179 Output Air Temp Sensor 2 B3119 Keyless Entry Antenna 1 Perf  
B0184 Solar Load Sensor 1 Circ Perf B3120 Keyless Entry Antenna 2 Perf  
B0189 Solar Load Sensor 2 Circ Perf B3121 Keyless Entry Antenna 3 Perf  
B0248 Air Flow Control 3 Circ B3122 Keyless Entry Antenna 4 Perf  
B0249 Air Flow Control 3 Circ Range B3142 Left Front Unlock Switch Circ Low  
B0268 Air Flow Control 7 Circ B3145 Right Front Unlock Switch Circ Low  
B0269 Air Flow Control 7 and Circ Range B3152 Left Front Lock Switch Circ Low  
B0408 Temp Control 1 Circ B3155 Right Front Lock Switch Circ Low  
B0409 Temp Control 1 Circ Range B3170 Right Front Window Up Switch Circ  
B0419 Temp Control 2 Circ Range B3175 Right Front Window Down Switch Circ  
B0423 Temp Control 2 Circ B3205 Left Front Window Motor Circ  
B0510 Output Air Temp Sensor 3 B3280 Right Front Window Express Up or Down Circ  
B0515 Output Air Temp Sensor 4 B3377 Left Front Window Up Switch Circ Low  
B0976 Power Mode OFF Indicator Circ B3382 Left Front Window Down Switch Circ Low  
B0977 Power Mode START Indicator Circ B3387 Right Front Window Up Switch Circ Low  
B0978 Power Mode ACCESSORY Indicator Circ B3392 Right Front Window Down Switch  
Circ Low  
B1000 Electronic Control Unit (ECU) Perf B3467 Left Front Window Express Up or Down  
Circ Low  
B1001 Option Configuration Error B3472 Right Front Window Express Up or Down Circ  
Low  
B1004 Keep Alive Memory (KAM) Reset B3542 Left Front Window Obstruction Sensor  
Control Circ  
B1007 EEPROM Write Error B3602 Convertible Top Control Switch  
B1009 EEPROM Checksum Mismatch B3618 Exterior Trunk Release Switch Circ Low  
B1011 System Disabled Info Stored B3619 Head-Up Display (HUD) Change Page Switch  
Circ  
B1013 Calibration Read Only Memory (ROM) Checksum Error B3620 Head Up Display  
(HUD) Info Up Switch Circ  
B1014 Program Read Only Memory (ROM) Checksum Error B3621 Head Up Display  
(HUD) Info Down Switch Circ  
B1259 Antenna Ground Circ B3634 Head Up Display (HUD) Dimming (Up) Switch Circ  
B1271 Theft Locked B3659 Head Up Display (HUD) Dimming Down Switch Circ  
B1291 Convertible Top Fifth Bow Pos B3666 Rear Tonneau Pos Error  
B1325 Device Power 1 Circ Volt B3667 Tonneau Release Circ  
B1327/8 Device Power 1 Circ Low/high B3670 Pump Motor Temp Sensor Circ  
B1336 Device Power 3 Circ Range/Perf B3715 Front Wiper Relay Drive Circ  
B1370 Device Ignition 1 (ON and START) Circ B3744 Head Up Display (HUD) Mode  
Switch Circ  
B1420 Device Volt B3794 Cruise Control Function Request Circ  
B1440 Power Mode Master Input Circs Mismatch B3810 Headlamp Washer Relay Circ  
B1451 Accessory Power Circ B3848 Interior Door Handle Switch Circ  
B1474 Right Front Exterior Door Handle Switch Circ B3849 Left Front Exterior Door

Handle Switch Circ

B1480 Battery Rundown Protection Circ B3948 Left Front Turn Signal Circ

B1580 Left Front Mirror Horizontal Pos Sensor Circ B3949 Right Front Turn Signal Circ

B1590 Left Front Mirror Vertical Pos Sensor Circ B3950 Left Rear Turn Signal Circ

B1600 Mirror Motor 1 (vertical) Circ B3951 Right Rear Turn Signal Circ

B1605 Mirror Motor 2 (horizontal) Circ B3971 Folding Top Pos Sensor

B1697 Mirror Left-Up Control Switch Circ Low C0035 Left Front Wheel Speed Sensor Circ

B1702 Mirror Left-Down Control Switch Circ Low C0040 Right Front Wheel Speed Sensor Circ

B1707 Mirror Right-Up Control Switch Circ Low C0045 Left Rear Wheel Speed Sensor Circ

C0050 Right Rear Wheel Speed Sensor Circ P0203 Injector 3 Control Circ

C0110 Pump Motor Circ P0204 Injector 4 Control Circ

C0136 Base Brake System Pres Circ P0205 Injector 5 Control Circ

C0137 Base Brake System Pres Circ Range P0206 Injector 6 Control Circ

C0161 (ABS)/Traction Control (TCS) Brake Switch Circ P0207 Injector 7 Control Circ

C0179 System Thermal High P0208 Injector 8 Control Circ

C0186 Lateral Accelerometer Circ P0218 Trans Fluid OverTemp

C0196 Yaw Rate Circ P0220 Throttle Pos (TP) Sensor 2 Circ

C0220 Left Front (ABS) Channel in Release Too Long P0222 Throttle Pos (TP) Sensor 2 Circ Low Volt

C0221 Right Front (ABS) Channel in Release Too Long P0223 Throttle Pos (TP) Sensor 2 Circ High Volt

C0228 Left Rear (ABS) Channel in Release Too Long P0230 Fuel Pump Relay Control Circ

C0229 Right Rear (ABS) Channel in Release Too Long P0300 Engine Misfire Detected

C0240 PCM Traction Control Not Allowed P0315 Crankshaft Pos (CKP) System Variation Not Learned

C0242 PCM Indicated TCS Malfunction P0325 Knock Sensor (KS) Circ

C0249 Left Normal Force Error P0326 Knock Sensor (KS) Perf

C0250 Right Normal Force Error P0327 Knock Sensor (KS) 1 Circ Low Frequency

C0252 Veh Stability System (VSES) Sensors Uncorrelated P0332 Knock Sensor (KS) 2 Circ Low Frequency

C0253 Centering Error P0335 Crankshaft Pos (CKP) Sensor Circ

C0267 Low Brake Fluid Indicated P0336 Crankshaft Pos (CKP) Sensor Perf

C0277 Brake Pedal Pos Sensor Circ P0340 Camshaft Pos (CMP) Sensor Circ

C0278 Brake Pedal Pos Sensor Not Calibrated P0341 Camshaft Pos (CMP) Sensor Perf

C0281 Dynamic Rear Proportioning (DRP) Perf P0351 Ignition Coil 1 Control Circ

C0550 Electronic Control Unit (ECU) Perf P0352 Ignition Coil 3 Control Circ

C0551 Option Configuration Error P0353 Ignition Coil 3 Control Circ

C0558 Calibration Data Not Programmed P0354 Ignition Coil 4 Control Circ

C0561 System Disabled Info Stored P0355 Ignition Coil 5 Control Circ

C0565 Veh Identification Number (VIN) Info Error P0356 Ignition Coil 6 Control Circ

C0575 Left Front Solenoid/Motor/Actuator Circ P0357 Ignition Coil 7 Control Circ

C0580 Right Front Solenoid/Motor/Actuator Circ P0358 Ignition Coil 8 Control Circ

C0585 Left Rear Solenoid/Motor/Actuator Circ P0420 Catalyst System Low Efficiency Bank 1

C0590 Right Rear Solenoid/Motor/Actuator Circ P0430 Catalyst System Low Efficiency Bank 2

C0615 Left Front Pos Sensor Circ P0442 Evaporative Emission (EVAP) System Small

Leak Detected

C0620 Right Front Pos Sensor Circ P0443 Evaporative Emission (EVAP) Purge Solenoid Control Circ

C0625 Left Rear Pos Sensor Circ P0446 Evaporative Emission (EVAP) Vent System Perf

C0630 Right Rear Pos Sensor Circ P0449 Evaporative Emission (EVAP) Vent Solenoid Control Circ

C0696 Pos Sensor Overcurrent (5-volt supply) P0451 Fuel Tank Pres (FTP) Sensor Perf

C0710 Steering Pos Signal P0452 Fuel Tank Pres (FTP) Sensor Circ Low Volt

C0750 Left Front Low Tire Pres Sensor P0453 Fuel Tank Pres (FTP) Sensor Circ High Volt

C0755 Right Front Low Tire Pres Sensor P0454 Fuel Tank Pres (FTP) Sensor Circ

Intermittent

C0760 Left Rear Low Tire Pres Sensor P0455 Evaporative Emission (EVAP) System Large Leak Detected

C0765 Right Rear Low Tire Pres Sensor P0461 Fuel Level Sensor 1 Perf

C0820 EBCM Case Volt P0462 Fuel Level Sensor 1 Circ Low Volt

C0870 Device Volt Reference Output 1 Circ P0463 Fuel Level Sensor 1 Circ High Volt

C0895 Device Volt P0464 Fuel Level Sensor Circ Intermittent

C0899 Device 1 Volt Low P0496 Evaporative Emission (EVAP) System Flow During Non-Purge

C0900 Device 1 Volt High P0502 Veh Speed Sensor (VSS) Circ Low Volt

C1241 Steering Assist Control Actuator Circ P0503 Veh Speed Sensor (VSS) Circ

Intermittent

P0016 Crankshaft Pos (CKP)-Camshaft Pos (CMP) Correlation P0506 Idle Speed Low

P0030 HO2S Heater Control Circ Bank 1 Sensor 1 P0507 Idle Speed High

P0036 HO2S Heater Control Circ Bank 1 Sensor 2 P0521 Engine Oil Pres (EOP) Sensor Perf

P0050 HO2S Heater Control Circ Bank 2 Sensor 1 P0522 Engine Oil Pres (EOP) Sensor Circ Low Volt

P0056 HO2S Heater Control Circ Bank 2 Sensor 2 P0523 Engine Oil Pres (EOP) Sensor Circ High Volt

P0068 Throttle Body Airflow Perf P0531 A/C Refrigerant Pres Sensor Perf

P0101 Mass Air Flow (MAF) Sensor Perf P0532 A/C Refrigerant Pres Sensor Circ Low Volt

P0102/3 Mass Air Flow (MAF) Sensor Circ Low/high Frequency P0533 A/C Refrigerant Pres Sensor Circ High Volt

P0106 Manifold Absolute Pres (MAP) Sensor Perf P0562 System Volt Low

P0107/8 Manifold Absolute Pres (MAP) Sensor Circ Low/high Volt P0563 System Volt High

P0112/3 Intake Air Temp (IAT) Sensor Circ Low/high Volt P0572 Brake Switch Circ 1 Low Volt

P0116 Engine Coolant Temp (ECT) Sensor Perf P0573 Brake Switch Circ 1 High Volt

P0117/8 Engine Coolant Temp (ECT) Sensor Circ Low/high Volt P0575 Cruise Control Switch Signal Circ

P0120 Throttle Pos (TP) Sensor 1 Circ P0601 Control Module Read Only Memory (ROM)

P0121 Throttle Pos (TP) Sensor 1 Perf P0601 Trans Control Module (TCM) Read Only Memory (ROM)

P0122/3 Throttle Pos (TP) Sensor 1 Circ Low/high Volt P0602 Control Module Not Programmed

P0128 Coolant (ECT) Below Thermostat Regulating Temp P0602 Trans Control Module (TCM) Not Programmed

P0131 HO2S Circ Low Volt Bank 1 Sensor 1 P0603 Control Module Long Term Memory Reset  
P0132 HO2S Circ High Volt Bank 1 Sensor 1 P0603 Trans Control Module (TCM) Long Term Memory Reset  
P0133 HO2S Slow Response Bank 1 Sensor 1 P0604 Control Module Random Access Memory (RAM)  
P0134 HO2S Circ Insufficient Activity Bank 1 Sensor 1 P0604 Trans Control Module (TCM) Random Access Memory (RAM)  
P0135 HO2S Heater Perf Bank 1 Sensor 1 P0606 Control Module Internal Perf  
P0136 HO2S Circ Bank 1 Sensor 2 P0607 Control Module Perf  
P0137 HO2S Circ Low Volt Bank 1 Sensor 2 P0608 Veh Speed Output Circ  
P0138 HO2S Circ High Volt Bank 1 Sensor 2 P060E Control Module Throttle Pos (TP) System Perf  
P0140 HO2S Circ Insufficient Activity Bank 1 Sensor 2 P060D Control Module Accel Pedal Pos (APP) System Perf  
P0141 HO2S Heater Perf Bank 1 Sensor 2 P0615 Starter Relay Control Circ  
P0151 HO2S Circ Low Volt Bank 2 Sensor 1 P0621 Generator L-Terminal Circ  
P0152 HO2S Circ High Volt Bank 2 Sensor 1 P0622 Generator F-Terminal Circ  
P0153 HO2S Slow Response Bank 2 Sensor 1 P0641 5-Volt Reference 1 Circ  
P0154 HO2S Circ Insufficient Activity Bank 2 Sensor 1 P0646 A/C Clutch Relay Control Circ Low Volt  
P0155 HO2S Heater Perf Bank 2 Sensor 1 P0647 A/C Clutch Relay Control Circ High Volt  
P0156 HO2S Circ Bank 2 Sensor 2 P0650 Malfunction Indicator Lamp (MIL) Control Circ  
P0157 HO2S Circ Low Volt Bank 2 Sensor 2 P0651 5-Volt Reference 2 Circ  
P0158 HO2S Circ High Volt Bank 2 Sensor 2 P0654 Engine Speed Output Circ  
P0160 HO2S Circ Insufficient Activity Bank 2 Sensor 2 P0685 Engine Controls Ignition Relay Control Circ  
P0161 HO2S Heater Perf Bank 2 Sensor 2 P0689/90 Engine Controls Ignition Relay Feedback Circ Low/High Volt  
P0171 Fuel Trim System Lean Bank 1 P0700 Trans Control Module (TCM) Requested MIL Illumination  
P0172 Fuel Trim System Rich Bank 1 P0703 Brake Switch 2 Circ  
P0174 Fuel Trim System Lean Bank 2 P0711 Trans Fluid Temp (TFT) Sensor Perf  
P0175 Fuel Trim System Rich Bank 2 P0712/3 Trans Fluid Temp (TFT) Sensor Circ Low/High Volt  
P0201 Injector 1 Control Circ P0719 Brake Switch Circ Low Volt  
P0202 Injector 2 Control Circ P0722 Output Speed Sensor Circ Low Volt  
davidfarmerstuff.com P0723 Output Speed Sensor Circ Intermittent  
P0724 Brake Switch Circ High Volt  
P0741 Torq Conv Clutch (TCC) System - Stuck Off  
P0742 Torq Conv Clutch (TCC) System - Stuck On  
P0751 1-2 Shift Solenoid (SS) Valve Perf - No First or Fourth Gear  
P0752 1-2 Shift Solenoid (SS) Valve Perf - No Second or Third Gear  
P0756 2-3 Shift Solenoid (SS) Valve Perf - No First or Second Gear  
P0757 2-3 Shift Solenoid (SS) Valve Perf - No Third or Fourth Gear  
P0787 3-2 Shift Solenoid (SS) Control Circ Low Volt  
P0788 3-2 Shift Solenoid (SS) Control Circ High Volt  
P0801 Reverse Inhibit Solenoid Control Circ  
P0803 Skip Shift Solenoid Control Circ

P0833 Clutch Pedal Switch 2 Circ  
P0894 Trans Component Slipping  
P0961 Line Pres Control (PC) Solenoid System Perf  
P0973 1-2 Shift Solenoid (SS) Control Circ Low Volt  
P0974 1-2 Shift Solenoid (SS) Control Circ High Volt  
P0976 2-3 Shift Solenoid (SS) Control Circ Low Volt  
P0977 2-3 Shift Solenoid (SS) Control Circ High Volt  
P1101 Intake Air Flow System Perf  
P1133 HO2S Insufficient Switching Bank 1 Sensor 1  
P1134 HO2S Transition Time Ratio Bank 1 Sensor 1  
P1153 HO2S Insufficient Switching Bank 2 Sensor 1  
P1154 HO2S Transition Time Ratio Bank 2 Sensor 1  
P1258 Engine Coolant OverTemp - Protection Mode Active  
P1380 Misfire Detected - Rough Road Data Not Available  
P1381 Misfire Detected - No Communication With Brake Control Module  
P1482 Cooling Fan Speed Output Circ  
P1516 Throttle Actuator Control (TAC) Module Throttle Actuator Pos Perf  
P1617 Engine Oil Level Switch Circ  
P1621 Control Module Long Term Memory Perf <http://www.davidfarmerstuff.com/>  
P1621 Trans Control Module (TCM) Long Term Memory Perf Please support my site via link on Homepage  
P1630 Theft Deterrent Learn Mode Active  
P1631 Theft Deterrent Fuel Enable Signal Not Correct  
P1682 Ignition 1 Switch Circ 2  
P1810 Trans Fluid Pres (TFP) Pos Switch Circ  
P1815 Trans Fluid Pres (TFP) Valve Pos Switch - Start in Wrong Range  
P1816 Trans PresValve Pos Switch Indicates Park/Neutral (P/N) with Drive Ratio  
P2066 Fuel Level Sensor 2 Perf  
P2067/8 Fuel Level Sensor 2 Circ Low/High Volt  
P2101 Control Module Throttle Actuator Pos Perf  
P2119 Throttle Closed Pos Perf  
P2120 Accel Pedal Pos (APP) Sensor 1 Circ  
P2122/3 Accel Pedal Pos (APP) Sensor 1 Circ Low/high Volt  
P2125 Accel Pedal Pos (APP) Sensor 2 Circ  
P2127/8 Accel Pedal Pos (APP) Sensor 2 Circ Low/high Volt  
P2135 Throttle Pos (TP) Sensor 1-2 Correlation  
P2138 Accel Pedal Pos (APP) Sensor 1-2 Correlation  
P2176 Minimum Throttle Pos Not Learned  
P2610 Control Module Ignition Off Timer Perf  
P2636 Fuel Transfer Pump Flow Insufficient  
P2763/4 Torq Conv Clutch (TCC) Pres Control (PC) Solenoid Control Circ High/low Volt  
P2769 Torq Conv Clutch (TCC) Enable Solenoid Control Circ Low Volt  
P2770 Torq Conv Clutch (TCC) Enable Solenoid Control Circ High Volt  
U0001 High Speed CAN Communication Bus  
U0101 Lost Communications with Trans Control Module (TCM)  
U0121 Lost Communications with Electronic Brake Control Module (EBCM)  
U0140 Lost Communication With Body Control Module (BCM)  
U1000 Class 2 Data Link  
U1017 Lost Communications with Engine Control Module (ECM)

U1024 Lost Communications with Trans Control Module (TCM)  
U1040 Lost Communications with Electronic Brake Control Module (EBCM)  
U1064 Lost Communications with Body Control Module (BCM)  
U1088 Lost Communication with Sensing and Diagnostic Module (SDM)  
U1096 Lost Communication with Instrument Panel Cluster (IPC)  
U1098 Lost Communications with Head Up Display (HUD)  
U1128 Lost Communications with Radio  
U1137 Lost Communications with Digital Radio Receiver (DRR)  
U1151 Lost Communications with Communication Interface Module (OnStar®)  
U1153 Lost Communication with HVAC Control Module  
U1160 Lost Communications with Driver Door Module (DDM)  
U1161 Lost Communications with Pass Door Module (PDM)  
U1164 Lost Communications with Driver Door Switch (DDS)  
U1166 Lost Communication with Driver Pos Module (DPM)  
U1177 Lost Communications with Folding Top Controller (FTC)  
U1193 Lost Communications with Remote Control Door Lock Receiver (RCDLR)  
U1194 Lost Communications with Steering Column Lock Control Module (SCLCM)  
U1255 Class 2 Data Link  
U1300 Class 2 Data Link Low  
U1301 Class 2 Data Link High  
U1305 Class 2 Data Link Low or High  
U1500 Inter-device Dedicated Bus 1  
U2100 Controller Area Network (CAN) Bus Communication  
U2105 Lost Communication with Engine Control Module (ECM)  
U2106 Lost Communication With Trans Control Module (TCM)  
U2107 Lost Communication With Body Control Module (BCM)  
U2108 Lost Communication With Electronic Brake Control Module (EBCM)  
U2112 Lost Communications With Electronic Suspension Control Module (ESC)  
U2153 Navigation Electronic Control Unit (ECU) - VICS Communication Circ